

B2101-2
MASSAGE FUNCTION RECLINER

SAVE THESE INSTRUCTIONS



——— Operation Instructions ———

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our company reserves the right to change and explain the design of the product. If there is some difference between the product function in market circulation and the description in the manual, it is a normal update of the product, and our company will not inform you otherwise. The specific product function and color shall prevail in kind.

CONTENTS

Before use

Safety Precaution	02-04
Product Structure	05
Installation Parts	06-08
Placement of Massage Recline	09-10

Usage method

Operation Instructions	11-15
End massage	15

Maintain


Cleaning & Maintenance	16
------------------------	----


Important

Troubleshooting	17
Product Specifications	18

Safety Precautions (Must be observed)

■ Before use, carefully read all relevant instructions.


 Warning	Indicates improper use that may result in severe injury or death.
---	---

 Caution	Indicates improper use that may result in minor injury or property damage.
---	--


■ Pay attention to the symbols preceding each safety note.

 Forbidden	Absolute prohibition
---	----------------------

Do NOT use the massage function under the following conditions:

 Forbidden	<ul style="list-style-type: none"> ■ Osteoporosis patients. ■ Individuals with severe heart conditions or those wearing electronic medical devices (e.g., pacemakers, defibrillators) or implanted medical equipment sensitive to electromagnetic interference. ■ Individuals with a high fever (above 38°C/100.4°F). ■ Pregnant women, those who have recently given birth, or women during menstruation. ■ Individuals with thrombosis, aneurysms, severe varicose veins, or other circulatory system conditions requiring medical prohibition of massage. For thrombosis, avoid massaging the affected area for at least two weeks after its occurrence. ■ Individuals with physical injuries or skin conditions. ■ Those with spinal abnormalities, scoliosis, or other conditions where a physician prohibits the use of this appliance or its massage function. ■ Do not use the appliance or its massage function when the body is damp or wet.
--	--

Safety Precautions (Must be observed)

Safety precautions	
 Warnings	<ul style="list-style-type: none"> ■ Keep children away from moving parts of this appliance. ■ Use only a properly grounded power source compatible with this appliance. ■ Unplug the power plug after use or before cleaning to prevent equipment damage or personal injury. ■ Operate the appliance strictly according to the instructions in this manual. ■ Do not use accessories or attachments not recommended by the manufacturer. ■ Do not use this appliance outdoors. ■ Avoid using near open flames (e.g., heaters) or while smoking. ■ Do not place heating devices (e.g., electric blankets) on this appliance. ■ Do not sit on the backrest, leg rest, armrests, or stand on the seating area. ■ Never use this appliance for purposes not specified in the manual. ■ Do not use the massage function if the outer casing or cover is damaged to avoid injury. ■ Do not use the massage function while intoxicated, unwell, or feeling physically impaired. ■ If the power cord is damaged, it must be replaced by the manufacturer, authorized service personnel, or qualified professionals to avoid hazards. ■ This appliance is not intended for use by individuals with physical, sensory, or mental impairments, or lack of experience/knowledge (including children), unless supervised by a responsible person ensuring their safety. Children must be supervised to prevent them from playing with the appliance. ■ Do not power the appliance through a lamp socket or similar unapproved source. ■ The total rated current of devices connected to an extension power outlet must not exceed the original fixed outlet or circuit's rated capacity. ■ Do not use this product near flammable, explosive materials, or in similar hazardous environments. ■ Users must not disassemble the product, modify internal wiring, components, or safety mechanisms. ■ When unplugging, do not pull on the power cord. ■ Do not replace the appliance's fuse with ordinary conductive materials or fuses exceeding the specified current rating.

Safety Precautions (Must be observed)

Product service and maintenance



Caution

- This appliance must only be serviced by manufacturer-authorized centers. Users must not disassemble or repair it themselves.
- The massage mechanisms are specially designed and require no routine maintenance.
- Always turn off the main power switch after use.
- When not in use for extended periods, coil the power cord and store the appliance in a dry, dust-free environment.

Usage Precautions




Caution

- The recommended use time for the massage function is 20 minutes.
- Ensure no foreign objects are trapped in the leg rest area before operation.
- Never place hands, feet, or head between the leg rest mechanism and the main body, or between the armrests and backrest frame.
- Avoid allowing hands, feet, or head to press against or sink into the fabric or leather covers in the massage area.
- Do not stand, jump, or apply excessive force on the sofa to prevent wire breakage, deformation, or accelerated wear.
- The sofa armrests are not designed for seating. Use only the designated seating areas.
- Avoid exposure to colored liquids, chemicals, or oily substances.
- Keep the sofa at least 2-3 cm away from painted furniture or walls to prevent fabric abrasion.
- Sharp objects (e.g., keys, knives) or pet claws may damage the sofa's surface.
- Do not roll or drag the appliance on uneven surfaces. Lift it fully to relocate.
- Do not use the appliance if the power socket is loose.
- Store away from high heat, open flames, or prolonged direct sunlight.

04

Product structure

Components and Functions Distribution


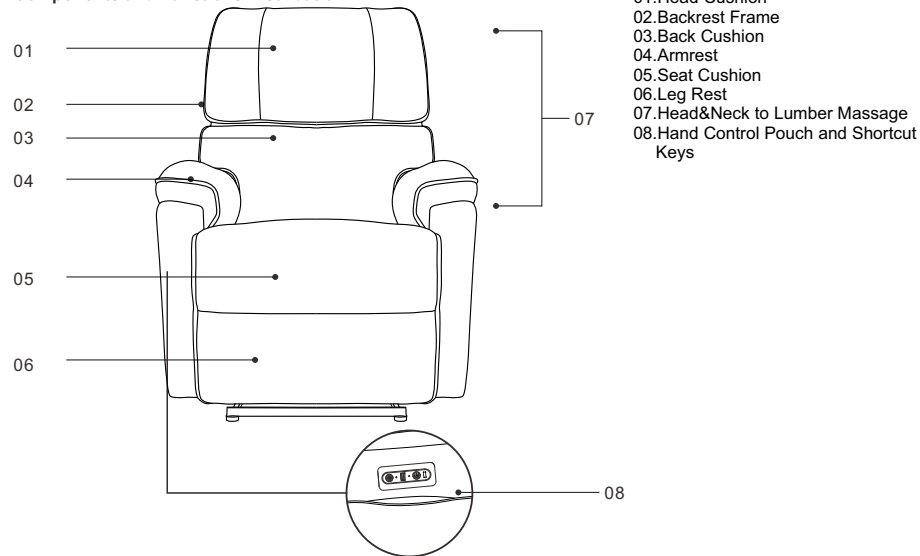


05



Installation parts

Backrest Frame Installation Instructions



1. Ensure the tabs on both sides of the backrest frame are not bent or twisted (Figure 1).
2. Verify the tabs on the seat frame assembly show no deformation (Figure 2).

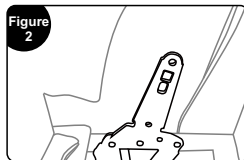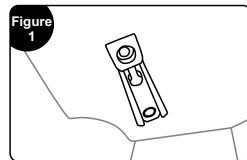

3. Align the tabs of the backrest frame with those on the seat frame, then insert downward (Figure 3).
4. A "click" sound from both sides confirms secure installation (Figure 4).

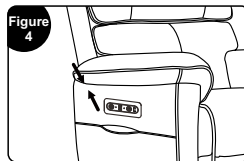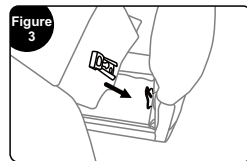



5. Connect the backrest frame's wire harness to the exposed harness at the rear of the seat frame (Figure 5).
6. A soft "click" indicates the connector is securely locked (Figure 6).

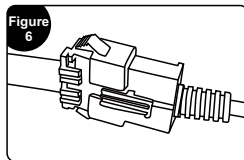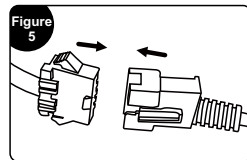


06

Installation parts


7. Join the wire harness connectors on the seat frame assembly (Figure 7).
8. After connecting the harness, flip and secure the plastic cover to complete installation (Figure 8).

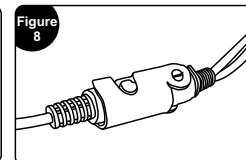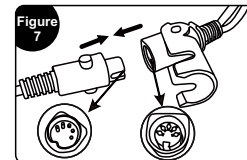

9. Fasten the rear hook-and-loop strap once the backrest frame is installed (Figure 9).

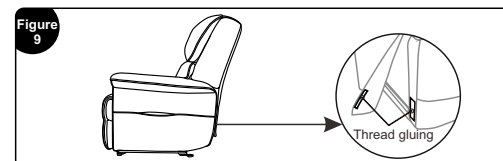

10. Recline the sofa, then zip-connect the central section between the backrest frame and seat cushion to finalize assembly (Figure 10).


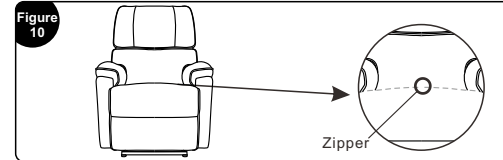


07



Installation parts

Hand Controller Battery Installation Instructions

1. Slide the battery cover downward to open (Figure 1).
2. Insert 7# AAA alkaline batteries according to polarity markings (Figure 2).

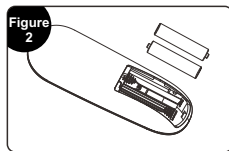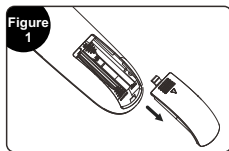

3. Align the battery cover with the notch at the rear of the hand controller and push upward to secure (Figure 3).
4. Battery installation is now complete (Figure 4).

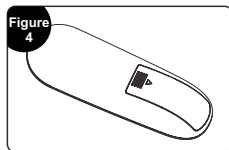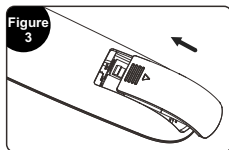

Placement of Massage Recliner


Installation Location Requirements



Caution

Ensure no persons, pets, or objects are near the unit. Maintain ≥ 13 cm clearance behind the massage recliner for posture adjustment.

Avoid placing under direct sunlight or in high-temperature environments. Place a protective mat under the recliner to prevent floor indentations.

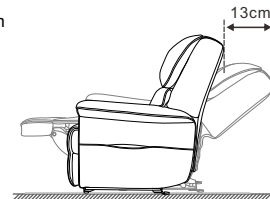


Product Relocation Instructions



Caution


- CAUTION: This unit is heavy. Always lift with ≥ 2 persons.**
1. When moving on floors or delicate surfaces: Lift the entire unit to avoid surface damage.
 2. During lifting/placement: Guard against hand/foot crushing or back strain.

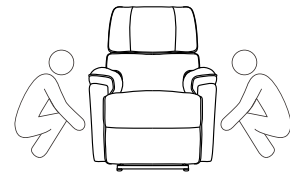

Placement of Massage Recliner


Installation and Usage of Head Cushion / Back Cushion

1. Using the head cushion reduces the intensity of the neck and shoulder massage. You can choose whether to use the head cushion according to your needs (use of the head cushion is recommended). The head cushion is connected to the backrest frame by a zip.
2. Use the back cushion for the appliance rest state. It is recommended to remove the back cushion when using the appliance massage function.

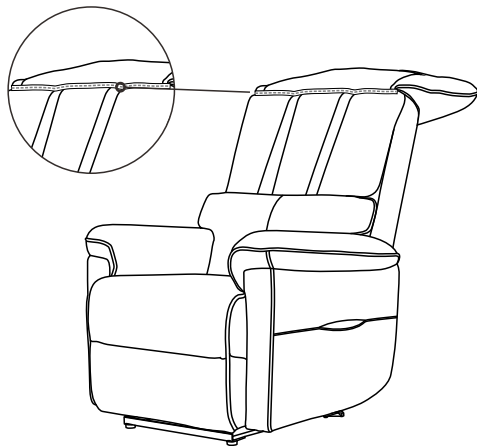

Operation Instructions


Hand Controller Key Functions

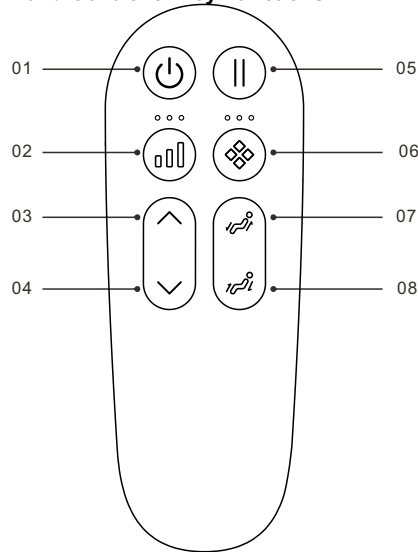

1. Power: Press to turn on or off.
2. Intensity: Press to adjust the intensity, 3 levels in total, corresponding to 3 indicator lights and 3 sounds respectively.
3. Up: Short press to adjust the massage area upwards, long press to adjust the shoulder position upwards.
4. Down: Short press to adjust the massage area downwards, long press to adjust the shoulder position downwards.
5. Pause: Press to pause or resume massage.
6. Auto: Press to switch between 3 automatic massage programs, each of the 3 programs corresponds to 3 indicator lights and 3 sounds.
7. Sit up: Press to raise the seat position, release to maintain the current seat position.
8. Lie down: Press to lower the seat position, release to maintain the current seat position.

Operation Instructions

Shortcut Keys Description

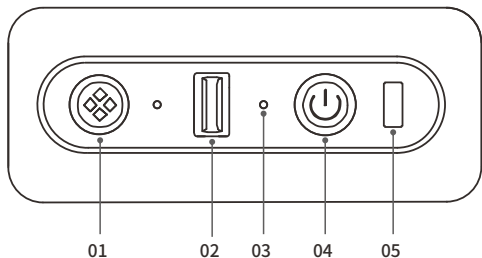


- 01.Auto: Short press to switch between 3 automatic massage programs.
02.Linkage lift: Press backward to lie down, press forward to sit up, release to maintain the current seat position.
03.Indicator light: Slow flash is standby; fast flash is pause; normal light is working.
04.Power: Short press to pause, long press for 3 seconds to turn on or off. After turning on, the appliance will lie down automatically; after turning off, the appliance will reset automatically.
05.USB charging port: 5V, 1A.

Operation Instructions

I. Power On/Off

Connect the power plug to the power outlet.
Turn on or off the main switch located on the lower back of the appliance (Fig. 1).

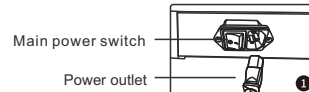

II.Start Massage

- 1.Short press the "Power" button on the remote control or long press the "Power" button on the shortcut keys for 3s to turn on or off the appliance.
- 2.The angle will be adjusted automatically. Wait until the adjustment is complete, or press the "Auto" button to skip the detection and proceed directly to the next step.
- 3.Enter body scanning process, or press the "Auto" button to start massage directly.
- 4.After completing the body scanning process, the appliance will prompt the user to fine-tune the shoulder position (while emitting a "beep... beep..." sound). If the massage rollers are positioned at your shoulder area, no adjustment is needed; simply press the "Auto" button to start the massage. If it is not, use a long press of the "Up" or "Down" button to adjust the massage rollers to your shoulder position, then press the "Auto" button to start the massage. If no action is taken within 10 seconds, the current massage rollers position will be automatically set as the shoulder position, and the massage will commence.

III. Pause

- 1.After turning on the appliance, press the "II" pause button to put the appliance into pause, stopping all massage functions. Press the "II" pause button again to resume the appliance to its previous massage mode.
- 2.When the appliance is in pause for more than 20 minutes, it will automatically shut down.
- 3.When the appliance enters pause, the intensity and auto mode indicator lights on the remote control, as well as the indicator lights on the shortcut keys, will all enter a rapid flashing.

IV. Auto Mode (Only Operable during Massage)

Press the "Auto" button on the remote control or shortcut keys to switch between three automatic modes.

- 1.Comfort massage: Mainly using single techniques or combinations of techniques such as kneading, tapping, kneading&tapping, shiatsu, top of the waist and tuina on the neck, shoulders, back and waist to provide deep massage, release physical and mental stress, and revitalise the whole body.

Operation Instructions

2. Neck&Shoulders care: Mainly using rubbing, kneading, pressing, stretching, lifting, and pushing the neck and shoulders to relieve shoulder soreness, alleviate neck fatigue, promote blood circulation, and relax the neck and shoulders.
3. Back&Lumber care: Mainly using rubbing, kneading, pushing, compressing, knocking and top of the waist to alleviate back and lumber soreness, unblock meridians, relax muscles, and relieve pressure on the back and lumber.

V. Auto Local Message (Only Operable during Massage)

Pressing the "Up" or "Down" button of the remote control, you can control the massage rollers to travel up and down, and provide targeted massage to the neck, shoulders, back and lumber.

VI. Angle Adjustment

Sit up: Press the "Sit up" button of the remote control or press the "Linkage lift" button of shortcut keys forward to raise the seat position, release to maintain the current seat position.

Lie down: Press the "Lie down" button of the remote control or press the "Linkage lift" button of shortcut keys backward to raise the seat position, release to maintain the current seat position.

VII. End Massage

During the massage:



1. Short press the "Power" button of the remote control, all massage functions will be shut down, and the angle will be reset.
2. Long press the "Power" button of shortcut keys, all massage functions will be shut down, and the angle will be reset.
3. When the timer is finished, all massage functions are shut down, the angle is not reset; the angle will be reset after pressing the "Power" button.

Operation Instructions

VIII. Remote Control Pairing

■ The original remote control has been paired at the factory. The pairing instructions for the new remote control are only applicable when the original remote control isn't functioning (please perform the operation in standby mode).

1. As shown in Figure 1, long press (about 3 seconds) on the remote control "Down" and "Lie down" button at the same time, until the red light of the remote control is normal on, and then release the button (Figure 1).
2. As shown in Figure 2, long press (about 3 seconds) on the "Auto" and downward "Linkage lift" button on the shortcut keys at the same time until you hear 5 "beep" sounds then release the button. During this process, if the red light on the remote control flashes five times and then turns off, it indicates that the pairing was successful. If the red light on the remote control stays on for 30 seconds and then turns off, it indicates that the pairing failed. If the pairing fails, you will need to repeat the pairing operation (Figure 2).

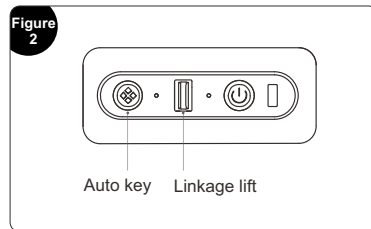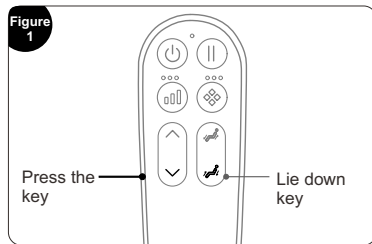

Cleaning & Maintenance

Cleaning Synthetic Leather and Plastic Parts (Use soft, dry cloth for leather)

- Never clean the unit with chemicals such as thinner, gasoline, or alcohol.
- When using commercially available leather care products (wipes), follow their instructions.
- For heavily soiled synthetic leather, clean as follows:
 - ① Soak a soft cloth in water or hot water containing 3%–5% neutral detergent, then thoroughly wring it out.
 - ② Wipe the leather surface with the damp cloth from step.
 - ③ Remove cleaning residue with a cloth soaked in clean water and thoroughly wrung out.
 - ④ Wipe again with a wrung soft cloth.
 - ⑤ Allow to air-dry naturally.
- For stubborn stains: Immerse a commercially purchased melamine foam pad in neutral detergent, then gently wipe the unit.
- Do not use hair dryers to speed up drying.
- Exercise caution when cleaning with denim or colored fabrics, as dyes may transfer to the synthetic leather surface.
- Avoid prolonged contact between leather and plastic, as this may cause discoloration.
- Synthetic leather may stain; cover contact areas with a towel when using hair dye.
- To reduce fabric wrinkles and maintain cushion fluffiness after prolonged sitting: Gently pat the sofa upon standing.



Troubleshooting

Fault	1. Controller Malfunction 2. Unit Stops Operating
Solution	1. Check if the power plug is securely connected to the outlet; verify the power switch is ON. Adjust the controller's direction or point it toward the sofa body for operation. 2. The massage function auto-stops when the timer ends; if the unit overheats from prolonged use, the thermal protection switch activates. Allow the unit to rest for half an hour before reuse.
Fault	Leather Friction Noise During Posture Adjustment
Solution	The product uses eco-friendly high-grade anti-wear leather. Due to inherent material properties, slight friction sounds at moving joints are normal. Note: If fabric/leather tearing sounds occur during operation, stop use immediately and contact authorized technicians.
Fault	Massage Rollers Fail to Reach Neck or Shoulders Position
Solution	If your head does not touch the head cushion or your back does not touch the backrest, your shoulder position may be lower than its actual position during the body scanning process. Sit in the deepest position of the seat, rest your head on the head cushion, and then start the operation again from the head.
Fault	Unit Damage / Abnormal Power Cord/Plug Heating
Solution	To prevent accidents, must contact an authorized service center.

Please feel free to contact the designated service personnel for any questions or doubts about this product.

Product specifications

Model: B2101-2

Name: Massage Function Recliner

Rated voltage: 110-120V~ 60Hz

220-240V~ 50Hz/60Hz

Rated Power Input: 110W

Rated Working Time: 20Minutes

Safety Design: Class I