


Future Foresee **MASSAGE CHAIR**
A300-1 Operation Instructions

SAVE THESE INSTRUCTIONS

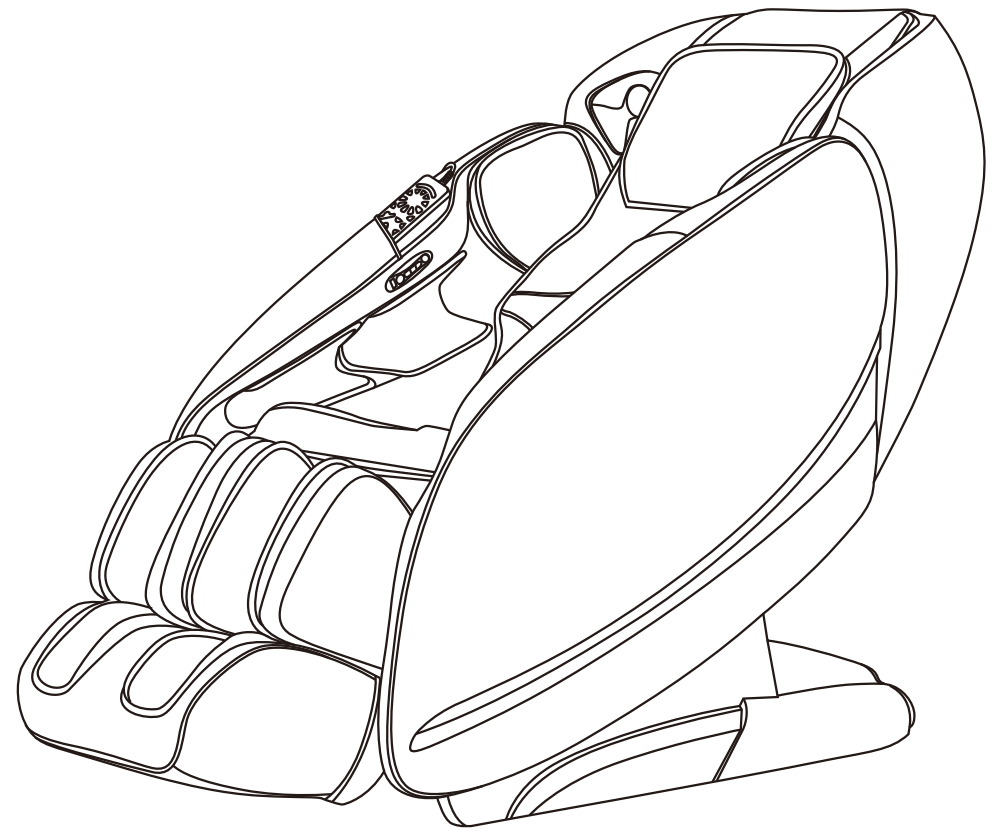

※Products refer to the actual product, without prior notice.

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

CONTENTS

| | |
|---------------------------------|----|
| Safety and maintenance | 02 |
| Name and function of components | 04 |
| Function | 05 |
| Method of usage | 06 |
| Product specification | 15 |

Safety and maintenance

1. Important Safety Warning.



- Don't allow children to touch moveable part of this product.
- Please use well-grounding power supply suited to this product.
- Please pull out the plug after use or before cleaning to avoid injury or Damage to the product.
- Please operate this product according to this manual instruction.
- Don't use accessories which are not recommended.
- Don't use this product outdoors.
- Please read this manual instruction carefully before operation.
- Any other usage that is not listed in this manual instruction is forbidden.
- 20 minutes of usage each time is recommended.
- Please don't use it if the leather is broken or damaged.
- Please don't use it if the cover or leather is damaged.
- Please don't use it if the radiator hole is covered or blocked.
- Please don't drop anything into this product.
- Please don't fall asleep while using this product.
- Please don't use it if drunk or feel unwell.
- Please don't use it within one hour after having meal.
- Please don't make the massage function too strong for avoiding Injury.

2. Environment for usage.

- Please don't use it under high temperature and moist environment such as bathroom.
- Please don't use it immediately while the environmental temperature changes sharply.
- Please don't use it under heavy-dusty or caustic environment.
- Please don't use it where there is not enough space or not good ventilation.

3. People who are not suitable to use this product.

- People who are suffering from osteoporosis are not suitable to use this product.
- People who are suffering from heart disease or carrying electronic medical equipment such as heart pacemaker are not suitable to use this product.
- People who are suffering from fever are not suitable to use this product.
- Pregnant women or women that are in menses period are not suitable to use this product.
- People who got injured or skin disease are not suitable to use this product.
- Children under 14-year old or people mentally unbalanced without being Supervised are not allowed to use this machine.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- People whose bodies are wet are forbidden to use this product.
- The appliance has a heated surface. persons insensitive to Heat must be careful when using the appliance.

4. Safety.

- Check the voltage if it is suitable to the specification of this product.
- Don't use wet hand to pull the plug.
- Don't make water go inside this product to avoid electric shock or cause damage to this product.

Safety and maintenance

- Don't damage the wires or change the circuit of this product.
- Don't use wet cloth to clean the electric parts such as switch and plug.
- Be away from this product under power cut state to avoid injury if the power comeback suddenly.
- Stop using this product while it works abnormal, and please consult local agent immediately.
- Stop using this product if you feel unwell, and please consult health care doctor.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Service agent or similarly qualified persons in order to avoid a hazard.


5. Maintenance.

- This product should be maintained by certain appointed agents, users are prohibited to disassemble or maintain by themselves.
- Please don't forget to cut the power after usage.
- Don't use this product if the socket looses.
- If this product will be left unused for long, please curl up the wires and reserve this product in dry and dustless environment.
- Don't reserve this product under high temperature or near fire and avoid longtime direct sunshine.
- If the detachable cord / supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a Hazard.
- Please clean this product by dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Don't use edged res to thrust this product.
- Don't roll or pull this product above uneven ground, it should be lifted before moving.
- Please use it intermittently; don't make this product work continuously for long.

6. Solution of ordinary malfunctions.

- It is nature movement voice if the motor sounds while in usage.
- If the controller can't work normally, please check the plug and socket if they are connected strongly and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the power-off button; If this product works continuously for long, the temperature protector will make the product automatically power-off, it should be used again after half an hour's rest.

Name and function of components

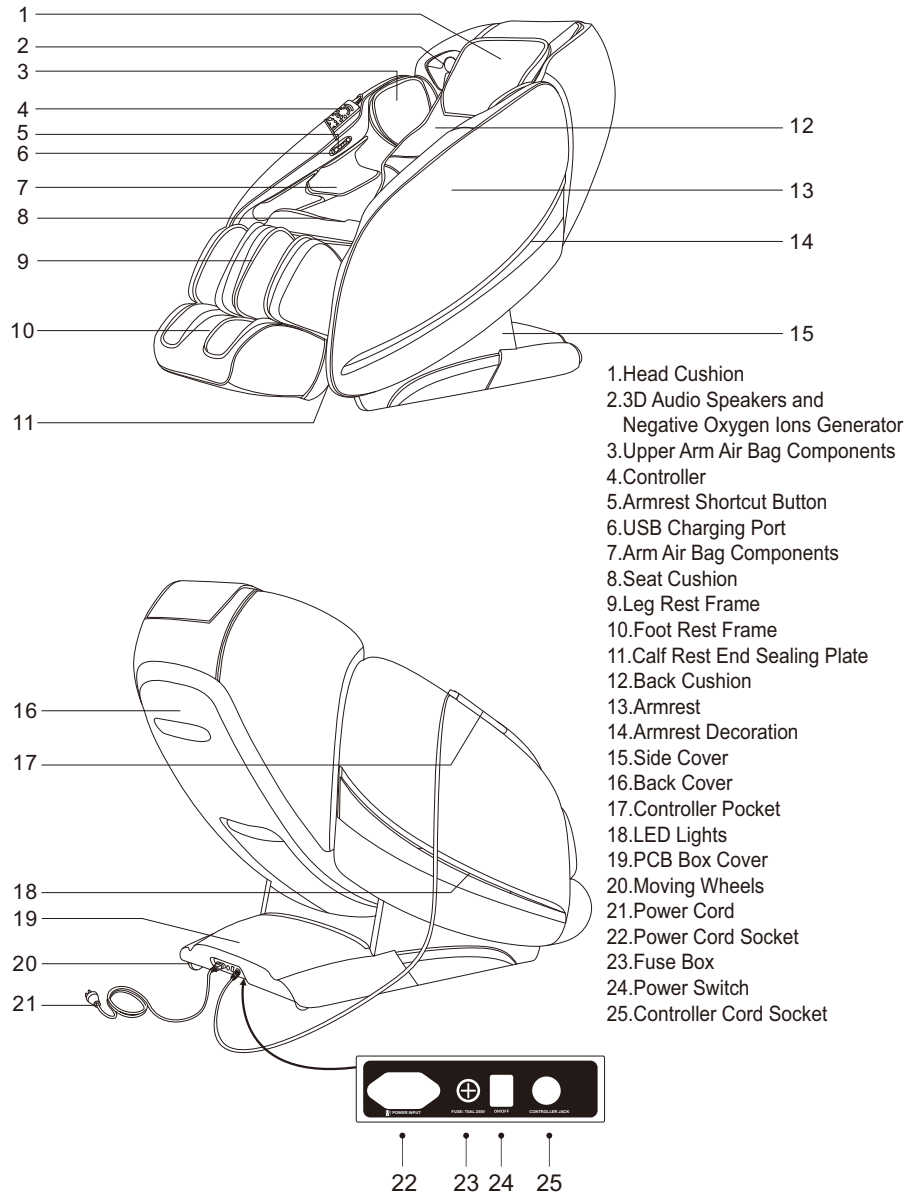


Function

- This product is designed with a set of four- wheel driven mechanical massage hands that can move up and down while stretching back and forth.
- Designed with five types emulation massage methods of shiatsu, kneading, tapping, knocking, simultaneous kneading and tapping.
- The shoulder part of the product is designed with an automatic detection and micro adjustment function
- Set with six kinds of characterized auto massage function: ache relieve, comfort, ease, demo, upper body, lower body
- This product is set with 2 memory functions: M1 and M2.
- Manual massage for the upper body with five options: overall, partial area, fixed spot, upper back partial area and lower back partial area massage. With five types emulation massage methods of shiatsu, kneading, tapping, knocking, simultaneous kneading and tapping. Each massage method with three grades of speed adjustable. In state of fixed spot and partial area, the massage hands can move up and down to adjust the massage point accurately. In the state of tapping, shiatsu and knocking, the width between the two kneading balls is adjustable with three grades: wide, medium and narrow.
- Air pressure massage function: full body air pressure massage, arms air pressure massage, (the upper arms are built with 4 air bags and the arms are built with 8 air bags), legs air pressure massage (with 16 air bags), with 3 modes and 3 intensity levels optional.
- Legs designed with roller massage function. At the bottom of foot, two pairs of mastoid rotating massage on toe root; scraping massage on the arch and heel.
- The back heating function uses carbon fiber as an infrared heating source
- The footrest can be extended to suit different leg lengths
- As the back rest reclines down, this product is built to save wall space by making the chair slide forward.
- The calf rest and back rest can be adjusted, and auto lay down mode to better suit the user's preferences.
- L shape back track fitting your body curves, can realize the zero gravity when back down
- The audio speakers are located on the upper arm area of the product, music can be played by connecting the blue tooth to a smart phone or tablet device.
- Negative oxygen ions generator set on the upper armrest.
- Design with LED light on each side of the armrest.
- With fast button on right armrest, including switch on/off, zero gravity, auto, linkage move.
- Design with USB charger on right armrest.
- Head Cushion design with two sections and collapsible design (2 levels when folded) , customer can use different levels up to their needs . To reduce the massage intensity of neck area .When extend to back area , can reduce the massage intensity of back area . Offer different choices to customer.

Method of usage


Note: The specific displays refer to the actual object of this product!

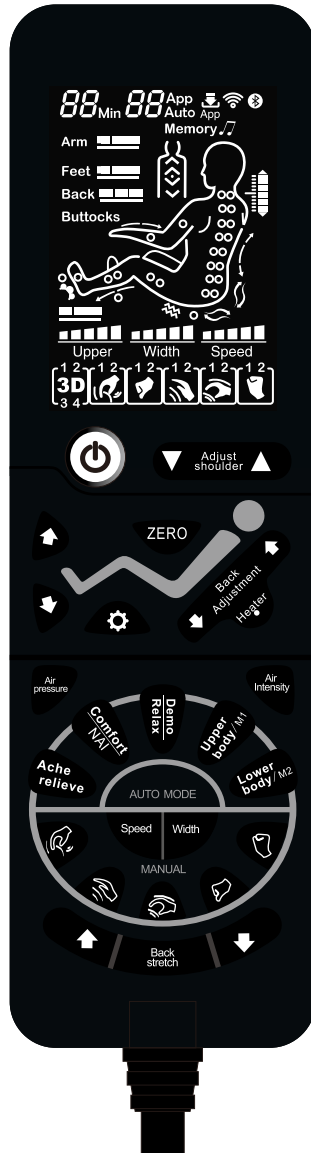

06

Method of usage


1. Switch power supply on

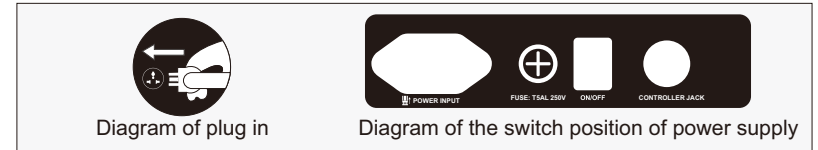

2. Start to massage

- 1). Press power button, massage chair automatically reclining, and start massage.
- 2). Automatic shoulder position and massage acupressure point detection, waiting for the completion of testing.
- 3). If there is difference with the massage balls and the actual shoulder position, you can adjust the up and down button to a suitable position. Shoulder position has 10 grades adjustable. It will run automatic massage if there is no adjustment on shoulder position within 10 seconds

| Button | Description | Display |
|-----------------|--|---------|
| Adjust shoulder | Move the massage balls upward to a suitable position | ↑ |
| | Move the massage balls downward to a suitable position | ↓ |

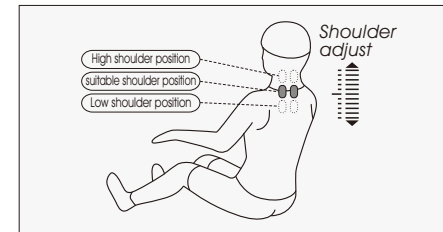

4) Choose massage function to massage

- Memory function massage

Press button "Upper body / M1" or "Lower body / M2" for 3 seconds, then enter into memory massage function "M1" or "M2", it will revert to the previous memory massage mode.

| Function | Button | Display |
|----------------|-----------------|---------|
| Memory Massage | Upper body / M1 | Memory |
| | Lower body / M2 | Memory |

07

Method of usage

- Characterized auto massage

| Function | Button | Feature | Display |
|----------------------------|--------|---|---------|
| Characterized auto massage | | Deeply massage on acupressure points, effectively alleviate pain | Auto F1 |
| | | Loosen body physique | Auto F2 |
| | | Promote blood circulation | Auto F3 |
| | | Fast to experience all the massage effect (press for 2s, switch to speed press) | Auto F0 |
| | | Massage focus on upper body | Auto F4 |
| | | Massage focus on lower body | Auto F5 |

- Upper body manual massage

| Function | Button | Adjust Massage Ball | Display |
|-----------|--------|--------------------------------|-------------------------------|
| Technique | | Speed And Width | |
| | | Speed | |
| | | Speed And Width | |
| | | Speed | |
| | | Speed And Width | |
| | Speed | | Three Grades Speed Adjustable |
| Width | | Three Grades Widths Adjustable | |

Method of usage

| Function | Button | Description | Display | |
|--------------|--------|---|------------------------|--|
| Back Stretch | | Fixed position (fixed spot) massage | | |
| | | Small area (partial area) massage back and forth | | |
| | | Overall massage back and forth | | |
| | | Upper back massage back and forth | | |
| | | Lower back massage back and forth | | |
| | | Massage point adjust (in fixed spot, partial modes you can adjust the massage position) | Massage hand move up | |
| | | | Massage hand move down | |

- Air pressure function massage

| Function | Button | Description | Display |
|-------------------|--------|---|-------------|
| Air pressure mode | | Three air pressure modes (full body, arms and legs) for lower body | Arm Feet |
| Intensity | | With three grades adjustable | Arm Feet |

- Other manual function






| Function | Button | Description | Display |
|----------------------|--------|---|---------|
| Roller | | Sole roller: sole roller switch, with 3 speed levels available | |
| Heating | | Far infrared back heating, has warm feeling when it start to work 3 minutes later | |
| Negative oxygen ions | | Long press for 3 seconds to on/off negative oxygen ions function | |

- Other manual function

| Function | Button | Description |
|------------------------|--------|---|
| Calf rise and drop | | Calf rest lifting button, press this button, calf restlifting slowly, stop when release it |
| | | Calf rest decline button, press this button, calf rest decline slowly, stop when release it |
| Backrest rise and drop | | Backrest lifting button, press this button, backrest lifting slowly, stop when release it |
| | | Backrest decline button, press this button, backrest decline slowly, stop when release it |
| Auto lay down mode | | With three modes circulation function, when press the button, turn into auto lay do wnmode. |


Method of usage

- Arm rest fast button

| Function | Button | Description |
|-------------------|---|---|
| On/off |  | Press this button switch on or off the chair |
| Linkage move up |  | Press and hold this button to slowly lift the backrest and lower the leg rest. Release the button to stop |
| Zero gravity |  | Press one time, switch one auto lay down mode, total 3 modes circulation |
| Linkage move down |  | Press and hold this button to slowly lower the backrest and lift the leg rest. Release the button to stop |
| Auto modes | AUTO | Press one time, switch one auto massage functionUSB |
| USB |  | USB charger. Can charge your smart device (cell phone) |

3. Turn off power, stop massage

- 1) Press power button during massage progress, all massage function will be stop immediately, the backrest and footrest will return to original position automatically, meanwhile you can set up memory function. After rated working time, all massage functions will be finished, meanwhile you can set up memory function, but backrest and footrest won't return to original position.
- 2) Memory store function: After rated working time or switch off, the hand controller displays "Memory" and glitter, remind the users whether need to store the massage mode before turn off, you can press the memory function buttons "M1" or "M2" as you like, store the massage mode.
- 3) Cut off the power of the whole machine.
Figure (Switch power off)

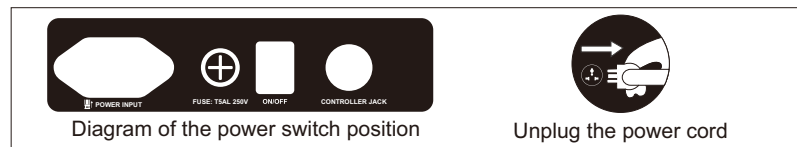

Method of usage

4. Installing the Arm Rests

- Find out the coupler plug from the seat frame base respond to the arm rest, go through out the end mid of the seat frame (Figure 1)
- After you finish the step 1, connect each plug according to the remarks on the wire. (Figure 2)

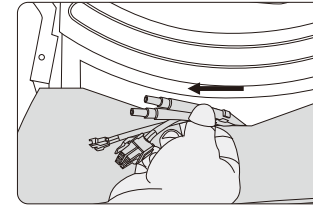


Figure 1

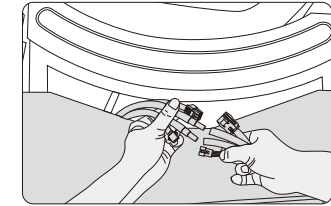


Figure 2

- Insert the plug well which go out from the seat frame base, as well as the air hose. (Figure 3)
- After you insert the plug well, put the wires in to the seat frame base along with the metal tube, then put on the cloth cover, avoid to the air hose folded. (Figure 4)

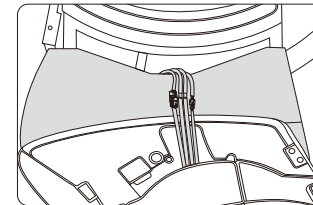


Figure 3

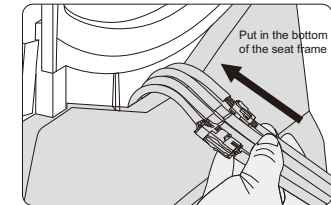


Figure 4

- Holding the front and back- end of sideboard by hands, let the back-end near the lower part of Capsule. (Figure 5)
- Insert the limit shaft on lower part of sideboard back-end into the lower-limit-block of Capsule, then lift the front sideboard gently, insert the upper one on sideboard back-end into the upper block of Capsule (Figure 6).

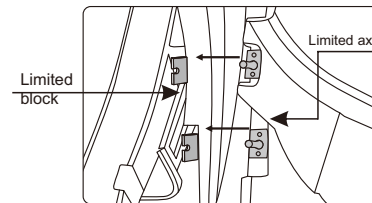


Figure 5

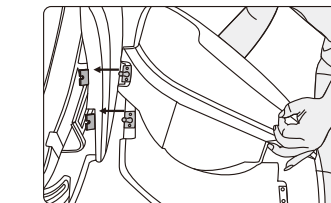


Figure 6

Method of usage

- The finished back-end sideboard is shown in figure (Figure 7) .
- Then let the front sideboard near steel frame, hang the pothook on front sideboard into the tube of frame (Figure 8) .

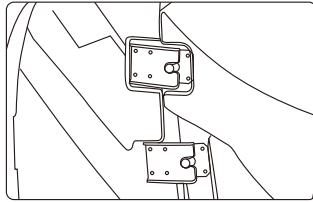


Figure 7

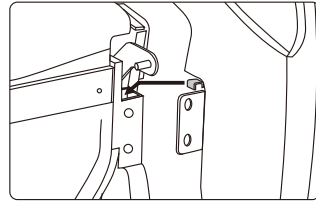


Figure 8

- Down-pushing the sideboard, then upper-pushing the front of sideboard, let the sideboard pothook fit the steel frame closely, shake the sideboard gently to check if it is installed in place or not (Figure 9) .
- Align the hole on the metal tube which on the front part of the armrest, tighten the cross screw on the armrest frame with a cross screw driver, finish the installation, and the same steps for the two armrests. (Figure 10)

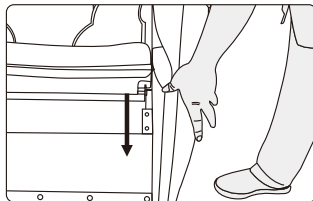


Figure 9

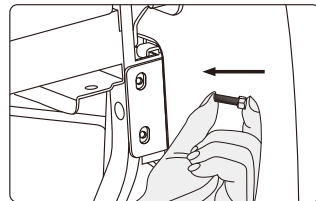


Figure 10

5.Calf installation

- Install the rotating shaft in calf fixed axis first, noticed the hole should be aligned, so that the R shape pin assembly (Figure 1)
- After calf is connected with the fixed axis aligned, then insert (Figure 2)

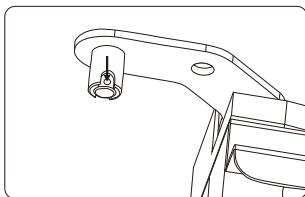


Figure 1

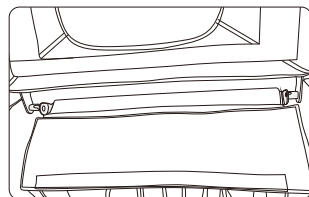


Figure 2

Method of usage

- Plug R pin, then moved to the other side of the calf, and plug R pin (Figure 3)
- Finished (Figure 4)

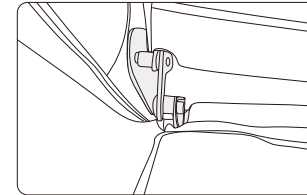


Figure 3

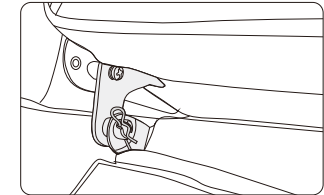


Figure 4

Note

- When the chair is working under the lay down mode and the calf rest is lifting, you can't press on the calf rest, avoid to the chair fall forward to cause injury.
- Please check the massage hand is it in the seat position when you sit down, avoid to uncomfortable feeling on your gluteus when you sit in because of the human body weight.

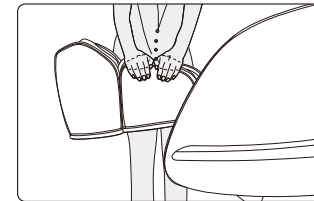


Figure 1



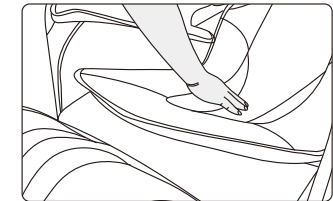



Figure 2

6. Head cushions and backrest pad's dismounting and use manual

- Using head cushions can reduce the kneading massage intensity on neck and shoulder, according to your needs to decide whether the head cushions is needed (recommend head cushions). Backrest cushion and backrest connected by zipper (1), head cushions and backrest pad connected by thread gluing (2).

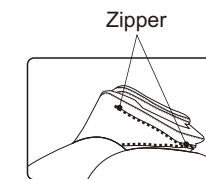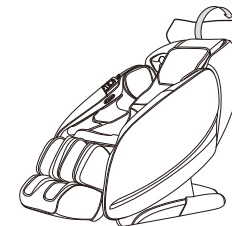

(1)

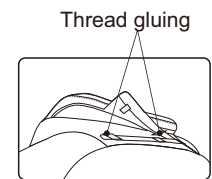


(2)

Method of usage

8.Floor Protection


- Put the heavy massage chairs on the wood floor for a may damage the floor, so please place a carpet or other object to avoid this damage.

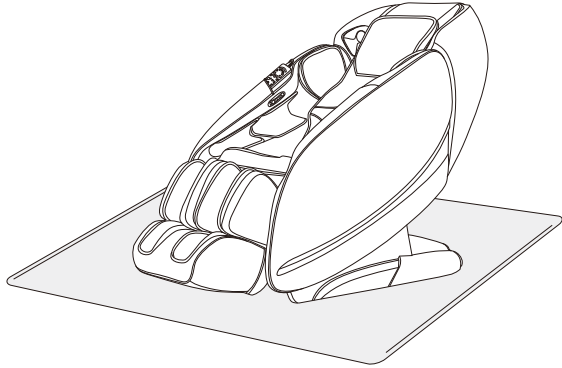

Caution: Do not move the chairs with its wheels on wood floor, rough ground or in a narrow space. Two people are required to lift the chair. During the lifting period, take the calf rest end sealing plate and backrest cover grooves as the force-bearing point(Please do not lift armrest directly.)

9.Method of movement

- Make sure that all wires are far above the ground, tilt the backrest backward to a certain degree (with the gravity center resting on the wheels), push the chair forward or backward with your hands and finally resume the chair to the normal position in a slow and gentle manner.

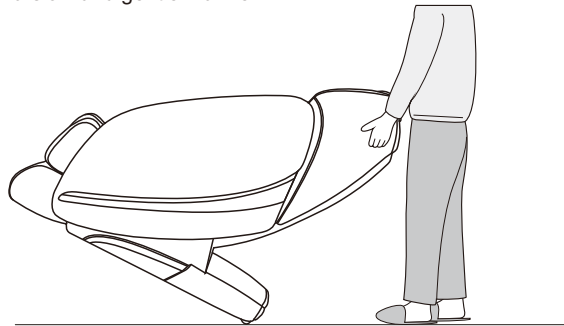

Note: During movement you must turn off the power first and then unplug the power cord and the controller cord.

Product specification

Model: A389

Configure: 1

Name: Massage Chair

Rated voltage: 110-120V~ 60Hz
220-240V~ 50Hz/60Hz

Rated power input:150W

Rated time: 20Min

Safety structure: Class I

Material introduction: PVC, PA, steel parts and electric &ele-ctron parts

| MATERIAL | PU | LEATHER | CLOTH | WOOD |
|----------|----|---------|-------|------|
| | | | | |

